How to Upgrade Firmware

(Although doing firmware update, data are not modified.)

- 1. Unzip file to PC.
- 2. Connect device to PC
- 3. Run Config.exe from PC as Administrator

 36XX_FWconfig_T87 					
새 폴더					
· · · · · · · · · · · · · · · · · · ·	수정한 날짜				
Config	2014-05-12				
Es configurate	2014-09-16				
iCommon.dll	2014-05-12				
INIC36XX_MANUFACTURE_RAM_V016.bin	2014-12-09				
INIC36XXE_MANUFACTURE_RAM_V016.bin	2014-12-09				
INIC3637E_USB_V109RC03.bin	2015-09-22				
ManufaturedRAMcode	2014-12-09				
Nvram	2015-04-29				
Nvram.ini.bak	2014-06-18				
PBThroughUSB.dll	2014-05-12				
SPTIASPI.DLL	2014-05-12				

4. Open the tool, and click Download FW

Setp 1 Scan Bus Setp 2 Download FW	Device Information Device = ZALMAN ZM-VE350 Chip Type = INIC-36XX Current Firmware = v1.09 Drive Letter = F S/N = 0000000000000000001 PID = 3E40 VID = 13FD USBPort = 3.0 activeFW = Primary	
Configuration Editor	Flash Type = Unknow flash	

젖는 위시(J):	🌗 36XX_FWcor	nfig_T87	- 🗿 🕼 🔛 🗔 -	
œ.	이름	*	수정한 날짜	유형
최근 위치	INIC36XX_MANUFACTURE_RAM_V016.bin		2014-12-09 오후 2: 2014-12-09 오후 2:	BIN 파일 BIN 파일
비망 화면 🔨	INIC3637E_U	ISB_V109RC03.bin	2012 09-22 오후 5:	BIN 파일
	-21	m		
심류의	파일 이르(N):	INIC3637E LISB V109BC03		9710
C. C. C.				E ZINY

5. Click Browse and find "INIC3637E_USB_V109RC03.bin"

6. If file is loaded well, then click "Start To Program", and continue

mware Download	Serve Streams	Ex.
Choose Firmware File		
d:₩Users₩deotera∜	/Desktop₩initio₩36XX_FWconfig_T87₩INIC3637E_U	ISB_V109
•	m	Browse
Update Nvram		\frown
		Start To Program
<u></u>		Dumo set to
		file

- 7. After download firmware is finished, then click ok.
- 8. Reconnect device